

INSTRUCTIONS FOR INSTALLATION AND USE
MIXTE SALAD'BAR
SB 40 M / SB 60 M



Made in France

MIXTE SALAD'BAR SB 40 M / SB 60 M

Congratulations for the acquisition of this upmarket appliance made in France. You chose an appliance which alloys the best technical qualities with a big user-friendliness. We wish you the biggest contentment

1. SECURITY INSTRUCTIONS

Please respect these instructions scrupulously to avoid any risk of fire, electric shock, scald or other wounds and damage. During the use of this appliance, fundamental circumspection of security must always be noticed, such as:

- Take into account the instructions to be systematically kept with the appliance.
- Install the appliance always in instructions respect. A 10 cm distance minimum with the partition or the wall is necessary.
- Protect the appliance from direct light of the sun, frost and humidity.
- Never leave the appliance within the reach of children or disabled persons without surveillance.
- The machine has to be used only by qualified person.
- Never move the appliance when it is working.
- Check that the appliance is definitely off before connecting it up or disconnecting it.
- Do not touch the hot surfaces of the appliance. The temperature of the hot surfaces can be very important when the appliance is working. Always use handles and control knobs.
- Do not use the appliance for other functions than determined use.
- Do not leave the electrical cord in contact of hot surfaces.
- The appliance should not be used close to combustible materials.
- During use, look after not to obstruct hearings of aeration of the appliance
- To avoid any electric shock, never plunge the cord or plug in water or quite other liquid.
- If the cord is harmed, it must be replaced by the producer, its after sale service or persons of similar skills to avoid any risk.
- Entrust repairs only to a skilled person.
- Use only spare parts of origin.
- Before cleaning the appliance, do not forget to disconnect it.

4. Light connecting system

- Connect both wires with the square connecting block (Picture D).

- Put and fix both stainless steel protections with 2 Torx screws (Picture G).



Picture D



Picture G

5. Mounting of the castors

- Features:

- 2 castors with brake system,
- 2 castors without any brake system,
- 16 screws 8x25,
- 16 washers (Picture H).

A) Lift up carefully the salad'bar and turn it perpendicular to the pallet (Picture I).



Photo H

B) Fix both castors with brake system on the front (on the side of the operating knobs) and both castors with no brake system on the back. Block the castors with a 13 spanner.

C) Remove the pallet.

D) Remove both brackets at the bottom of the salad'bar

- Set the salad'bar at the place wished and plug in it 220-240 V ~




Picture I

Brackets

11. INSTALLATION GUIDE

1. Unpack the salad'bar carefully.

- Remove the protective films (Picture A)

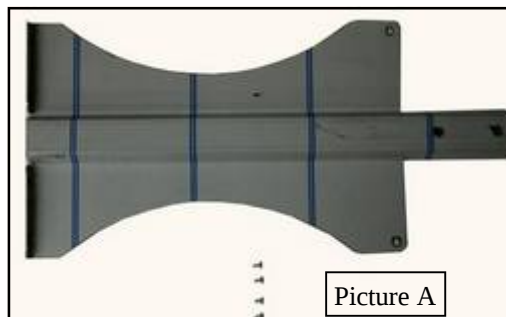


2. Installation of right and left uprights

- Fix both uprights with 8 round-headed screws 6x10 (Picture B)



3. Installation of the light reflector (upper part)

- Put the light reflector on both uprights (Photo C).

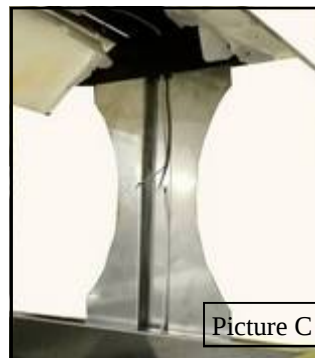

- Screw down on the upright with 8 Torx screws (Pictures E & F).



2. CONTENTS OF CARDBOARD PACKAGING

Device: a salad'bar

- Accessories:
- Two castors without brake + two castors with brake
 - A light reflector
 - A left upright and a right upright
 - Two stainless steel protections
 - Screws
 - The present note

See exploded view at the end of the document.

3. CONFORMITY OF USE

Use the salad'bar only to:

- keep warm (+20° to + 90°C) your hot starters, meat, vegetables, readymade dishes...during working and service hours. It enables you keeping warm products already cooked or hot.

- keep cold (+2° to +10°C) your cold starters, shellfish, meat, desserts during working and service hours. Afterwards they will be stored in a conventional cool chamber.

4. WAY OF FUNCTIONING

These salad'bars exist in 2 versions : SB 40 M (2 warming containers / 2 refrigerated containers) and SB 60 M (3 warming containers / 3 refrigerated containers).

To turn on your salad'bar, press on the switches (n°3 and 5 on picture): the green pilot light (n°2 on picture) and the electronic thermostat (n°1 on picture) ignite.

Set the temperature of the thermostat (n°6 on picture) on the desired temperature for the warming side. The electronic thermostat from the refrigerated part is preset in factory.

Press on the switch (n°4 on picture) to turn on the light (n°7 on picture).

Once water is hot, you can place the GN containers.



- | | |
|-------------------------------------|------------------------|
| 1 Electronic thermostat | 2 Green pilot light |
| 3 On/off switch (refrigerated part) | 4 On/off light |
| 5 On/off switch (warming part) | 6 Thermostat |
| 7 Led light | 8 1/4 lock drain valve |

Reach rule

Never put the device among household waste.
The device must be put down in a centre of recycling for the electric equipments.

The materials of the device are indeed reusable. By eliminating correctly the electric and electronic wastes, the recycling and quite other shape of re-use of worn equipments, you participate in a significant way in the environmental protection.

For any information about the collection of electric and electronic waste, please contact your distributor.

10. GUARANTEE

Conditions of guarantee

The guarantee applicable to any device is the commercial guarantee of the distributor or the retailer. Please contact the store where you bought your device to know the precise conditions.

The guarantee grants no right for damages.

The dispositions which follow are not exclusive of the profit of the legal guarantee planned by articles 1641 and following ones of the Civil code relative to the defects and the latent defects.

Exclusion clauses of the guarantee

Bad installation and bad maintenance, in particular if they do not respect current regulations or instructions appearing in this user guide.

Cannot benefit from the guarantee the repairs required as a result of false operations, of inappropriate use, of carelessness or of excess loads of the device, as well as those resulting from variations of the power supply, over tension or from defective installations.

The damage due to shocks, bad weather is not flatware by the guarantee. The material travels at the risks of the user; in case of delivery by carrier, the consignee has to have reservations towards the carrier before any delivery of the device.

The guarantee comes to an end in case of intervention, of repair, of modification by no qualified persons, or of use in inappropriate purposes.

7. TECHNICAL SPECIFICATIONS

Model	SB 40 M	SB 60 M
Outside dimensions	1495x855x1405 mm	2100x855x1405 mm
Weight	100 Kg	130 Kg
Temperature	+20° to +90° C (warming part) +2° to +10° C (refrigerated part)	+20° to +90° C (warming part) +2° to +10° C (refrigerated part)
Power	2250 W	2250 W
Gas	R 134 A	R 134 A
Bb Element	1	1
Current	10 A	10 A
Voltage	220-240 V ~	220-240 V ~
Colour	Wenge/ Light oak / Mahogany	Wenge/ Light oak / Mahogany

Wires colours correspondence

Phase
Neutral
Earth

Brown / Black / Grey
Blue
Yellow-Green

8. NORMS AND LEGALS DISPOSALS

The device is conform to :

IEC/EN 60335-1
IEC/EN 60335-2-49
IEC/EN 60335-2-89
EN 55014-1 + 55014-2
EN 61000-3-2 + 61000-3-3

9. ELIMINATION OF THE ELECTRIC AND ELECTRONIC WASTE

The device respects the directives:

2002/96/CE (DEEE) N°34270064800021
2002/95/CE (ROHS)
2006/95 CE
2004/108 CE



5. FUNCTIONING / MANIPULATION

a) Installation / assembly:

- Unpack carefully the appliance from its packaging
- Place the equipment on a stable and heatproof surface.
- Never place the device near a wall or near a partition made of combustible materials even if it is very well isolated.
- A distance of 10 cm from the partition or the wall is considered enough.
- Remove the protective film from the appliance.
- Position the accessories (see 11. Installation guide)

b) First starting:

For the warming part (right container)

Fill the container with water (about 5 cm above the heating elements) before switching on the salad bar.

Do not let it run without water : it could damage the heating elements and irretrievably bend the container.

To avoid quick evaporation, cover the whole tank with containers or lids.

First cleaning

Clean the device before the first use. (See 6 Cleaning)

Connection of the device

- Check that the tension and the frequency of the electricity network suit to the values indicated on the descriptive plate.
- Check that neither the cord nor the plug are damaged
- Make sure that every control knob is positioned on 0.
- Unwind completely the electric power cable and connect it in a normalised plug with the earth.
- The device is connected.

NB: in case of connection of the device in a plug without earth protection or directly on the electricity network, confide its connection to a qualified person .

c) Use of device :

Elements of command and display

Command/Display	Function
Refrigerated part (left container)	
Electronic thermostat (n°1 on picture)	Temperature setting
Switch I/O (n°3 on picture)	On/off
Warming part (right container)	
Green pilot light (n°2 on picture)	Machine on (pilot light on) Machine off (pilot light off)
Switch I/O (n°5 on picture)	On/off
Thermostat (n°6 on picture)	Temperature setting
Switch I/O (n°4 on picture)	Light on / Light off

Starting

Refrigerated part (left container)

Press on the switch (n°3 on picture), the machine is on. The preset electronic thermostat (n°1 on picture) flashes and displays the temperature.
Wait until the salad'bar is at the right temperature

Warming part (right container)

Press on the switch (n°5 on picture), the green pilot light (n°2 on picture) ignites.
Turn on the thermostat (n°6 on picture) on the desired position.

Press on the switch (n°4 on picture) to turn on light.

Temperature setting

Refrigerated part (left container)

The electronic thermostat (n°1 on picture) is preset in factory. It can be adjusted if necessary.
To modify the temperature, press the "set" key for 5 seconds: the programmed value is displayed and the LED flashes. Use the arrows to adjust your temperature and then valid by pushing on set.

Warming part (right container)

Set the temperature by positioning the thermostat (n°6 on picture) to the desired temperature.

Stopping the appliance

- Set each switch (n°3, 4 and 5 on picture) on 0: the appliance is no longer functioning.
- Let the device cool
- Disconnect the power cable.
- Clean the appliance. (see 6. Cleaning)

d) Breakdown / repair:

In case of breakdown or of damaged part, please call your after-sales service and confide any technical operation to qualified person.

When you contact the after-sales service of your distributor or your store, give him the complete reference of your device (commercial name, type and serial number). This information appears on the visible descriptive plate behind the device.

6. CLEANING AND MAINTENANCE

Disconnect the device.

Let cool completely the device before any technical intervention or cleaning.

Clean regularly the metallic parts after each use by using only use non-abrasive products, warm water and wash liquid: avoid the abrasive towelling. Rinse your device with a wet sponge and dry it with a soft cloth.

Never clean the device under a water jet, the infiltrations would risk to damage it in an irreparable way.

Never immerse the cord or the plug in the water or quite other liquid to avoid any electric shock.

Regularly change the water to avoid any scale deposit

Never use abrasive product or vinegar; it could damage the container in an irreparable way.