


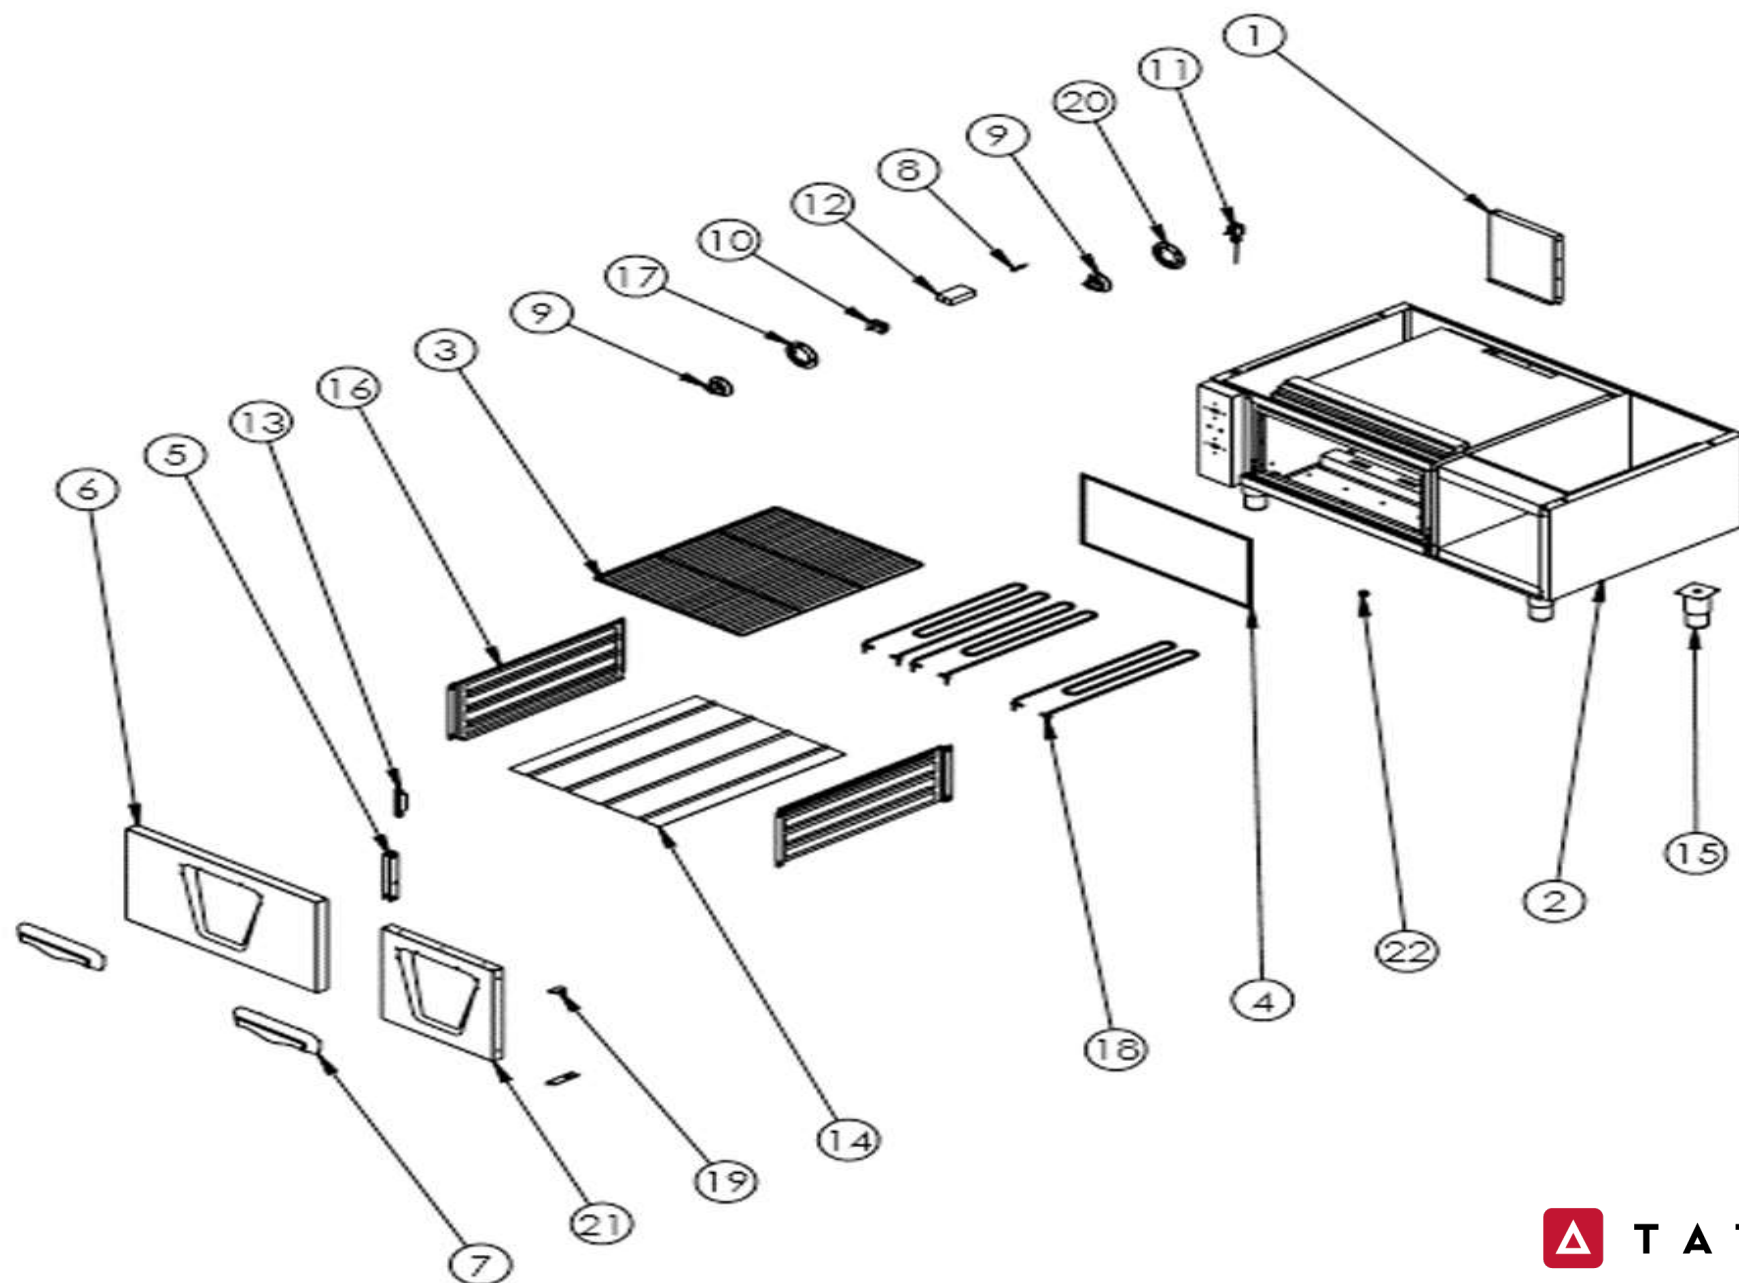

ШКАФ ЖАРОЧНЫЙ ЭЛЕКТРИЧЕСКИЙ 700 СЕРИИ TATRA ТЕО.127

1	CHIMNEY HOOD	Y.EMP.PLS.7FRE01.001	
2	BASE FRAME	Y.EMP.PLS.7FRE01.002	
3	SHELF	Y.EMP.PLS.7FRE01.003	
4	LID GASKET	Y.EMP.PLS.7FRE01.004	
5	HINGE	Y.EMP.PLS.7FRE01.005	
6	LID	Y.EMP.PLS.7FRE01.006	
7	HANDLE	Y.EMP.PLS.7FRE01.007	
8	WARNING LAMP	Y.EMP.PLS.7FRE01.008	
9	BUTTON	Y.EMP.PLS.7FRE01.009	
10	TRIPHAZE SWITCH 0-1	Y.EMP.PLS.7FRE01.010	
11	THERMOSTAT 90-300	Y.EMP.PLS.7FRE01.011	
12	COMUTATOR-LEVEL 0-3	Y.EMP.PLS.7FRE01.012	
13	HINGE HOLDER	Y.EMP.PLS.7FRE01.013	
14	BASE SHEETMETAL	Y.EMP.PLS.7FRE01.014	
15	FEET	Y.EMP.PLS.7FRE01.015	
16	SHELF SHEETMETAL	Y.EMP.PLS.7FRE01.016	
17	COMUTATOR BUTTON BUFFER	Y.EMP.PLS.7FRE01.017	
18	RESISTANCE	Y.EMP.PLS.7FRE01.018	
19	THERMOSTAT BUTTON BUFFER	Y.EMP.PLS.7FRE01.019	